 


JAPCELL

JCBT1 INSTRUKTIONER

► Check energiniveauet på alle 1,5V og 9V batterier, også knapceller!

► Nem at læse farvekodet analog viser.

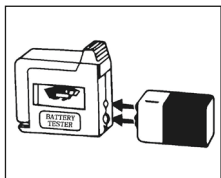


Til 1,5 og 9V batterier, toppen er til rundceller og 9V batterier, bunden er til knapceller (alkaliske)

Udskift


Lav energi

God

Hvis nålen ikke bevæger sig, undersøg da forbindelsespunkterne på batteriet, sørg for at de rører ved polerne, så der ikke kasseres gode batterier.

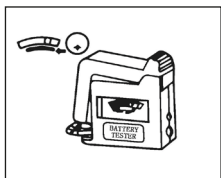

Batteritesteren kan teste følgende størrelser: AAA, AA, C, D, 9V.

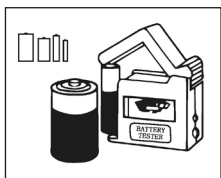

OBS!



Test så kort tid som muligt, for at undgå at dræne for meget strøm ud af batteriet.

Testeren er lavet til alkaline batterier.

JAPCELL

JCBT1 INSTRUCTIONS


- ▶ Checks power level of all 1.5V/9V batteries and miniature cells.
- ▶ Easy-to-read, colour-coded meter indicates power level.

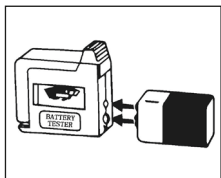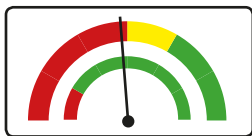


For 1.5v and 9v batteries, read off upper scale. For 1.5v miniature cells, read off 'button battery' scale.



If needle does not move, check that battery is touching both contacts before assuming that it is completely dead.

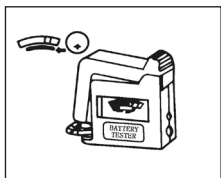

The Battery Tester may be used to test the following sizes: AAA, AA, C, D, 9V

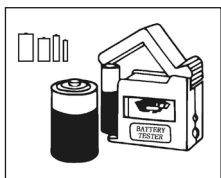

Don't forget

The Battery Tester is activated by the battery being checked. Keep test times as short as possible, to avoid unnecessary battery drain.

■ Technical specification is obtained by testing standard Duracell battery; if used on other battery brands, the specification is only for reference.

■ The tester is not suitable for alkaline battery, lead acid battery and lithium battery.