

1852 | MAR
INER
OUA
LITY

Induction Cooker

Instruction Manual



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE MACHINE.

For indoor use only!



RoHS ✓

CE



TECHNICAL SPECIFICATION

Model	ALP-A3B
Voltage/ Frequency	220-240V,50/60Hz
Rated Power	1500W
Unit Size	280*340*62mm
N.W.	1.7 kg

SAFETY PRECAUTIONS

Please read carefully the following instructions before using the induction cookers.

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, please switch off and take to the service center immediately.
- 15). Do not block the air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unit close to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.
- 19) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

OPERATION INSTRUCTION

1, Power on

- 1) When power on, the buzzer alerts, and LED displays “---”, the cooker is ready for working.

2, Switch on

- 1) After power on, press “ON/OFF” bottom, the LED show “ON” , power indicator light. the cooker will be in standby mode.

3, Switch Off

- 1)When in working mode, press “on/ off” button, the cooker will stop working.

4, Timer/Preset

- 1)Timer is available for Manual functions not for Automatic, Preset is available for Automatic function not for Manual function, timer range from 1 min to 4 hours.
- 2) When in Manual function mode touch “timer/preset” , timer indicator light , the LED show “00:00” , Press up or down to control of timer decrease or increase, timer range from 1-4 hours , and will be automatic confirmed after 5 seconds.
- 3) Touch “timer/preset “ can be delete this function .

5, Hot Pot (Manual-control Function)

- 1) Press “ Function” , the cooker will start working for “Hot Pot” on power 1500W, touch “+” or “-“ to increase or decrease power. Unattended time defaults to 120 mins automatic shutdown.
- 2) Hot Pot is available for Timer,not for Preset.

6, Fry (Manual-control Function)

- 1) Press “ Function” again , the cooker will start working for fry 240℃, touch “+” or “-“ to increase or decrease temp . Unattended time defaults to 120 mins automatic shutdown.
- 2) Fry is available for timer , not for preset.

7, BBQ(Manual-control Function)

- 1) Press “ Function” again, the cooker will start working for BBQ on 200℃, touch “+” or “-“ to increase or decrease power. Unattended time defaults to 120 mins automatic shutdown
- 2) BBQ is available for Timer , not for Preset.

8,Water (Automatic function)

- 1) Press “Function” again , the cooker will start working for Boil on 1500W, not allow to increase or decrease power.Unattended time defaults to 18 mins automatic shutdown
- 2) Water is available for Preset , not for Timer.

9, Milk (Automatic function)

- 1) Press “Function” again , the cooker will start working for Milk on 80℃, not allow to increase or decrease power. Unattended time defaults to 20 mins automatic shutdown.
- 2) Water is available for Preset , not for Timer.

10, Soup (Automatic Function)

- 1) Press “ Function” again, the cooker will start working for Soup on 1300W, not allow to increase or decrease power, will change to 800W automatic after working 12mins .Unattended time defaults to 120 mins automatic shutdown.
- 2) Soup is available for Preset , not for Timer.

11, Rice(Manual-control Function)

- 1) Press “Function” again, the cooker will start working for Porriade on 1300W, touch/slid “+” or “-” to increase or decrease power, will change to 800W automatic after working 12 mins.Unattended time defaults to 60 mins automatic shutdown
- 2)Rice is available for Timer , not for Preset


12,Electric/Volt

- 1)In working situation,Press “Electric/Volt”can check the current use electric or Voltage.

TYPES OF UTENSILS THAT CAN BE USED

1) Usable Pans


Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26cm.

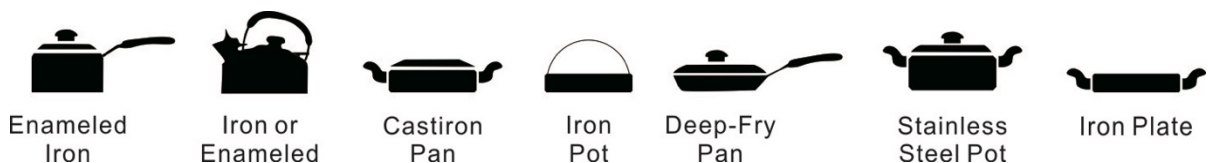

2) Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots.

Rounded-bottom pans/pots with bottom measuring less than 12cm.

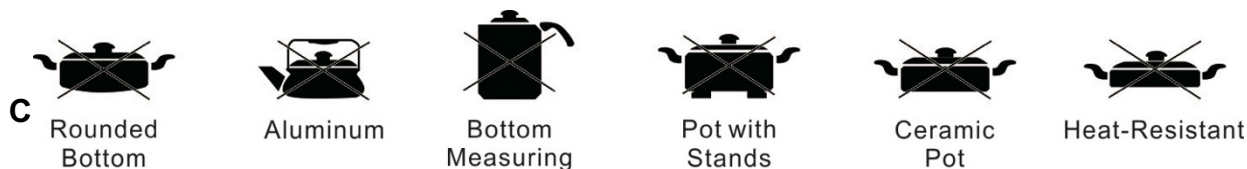

1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.

2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.

3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.

4). Wipe using dish washing agent and damp cloth.

5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.

6). Never run water over the unit (Water gets inside may cause malfunction).

FAULT ANALYSIS for induction cooker

E0: Check whether there is no pot or the pot is not acceptable

E1: Check whether the Voltage is too low, lower than 88V

E2: Check whether the Voltage is too high, higher than 280V.

E3: Check whether heat sensor is open or short circuit.

E4: Check whether IGBT is open or short circuit

E5: Check whether glass is over heat or dry boil.

E6: Check whether IGBT is over heat.